


# "EPW" PALLET-WEIGHING FLOOR SCALES



EPW15 with optional column

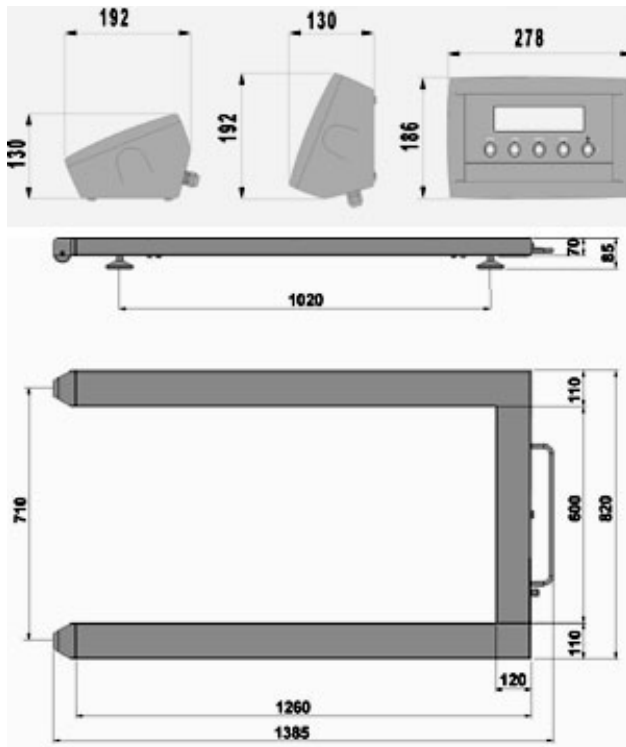

dimensions in mm

Multipurpose speedy and precise pallet-weighing movable scales, easy to use and move, and which quicken the weighing operations of any product on a europallet (800x1200 mm). It's equipped with wheels and handles, which allow to move and use the scale closer to the location in which one needs to weigh. CE-M approvable (OIML R-76 / EN 45501).

## MAIN FEATURES

- 5-key functional waterproof keypad.
- 25mm LCD backlit display with 6 high contrast digits with icons indicating the active functions.
- Easy to clean ABS **waterproof IP65** enclosure built to withstand harsh treatment and corrosive environments.
- Functions with 4 shear-beam IP67 load cells (painted models) or with IP68 load cells (stainless steel models) able to handle double the nominal load.
- Carbon steel bearing structure, oven-fire painted, fitted with antishock and adjustable feet, level, and wheels and handles for moving it.
- Connection cable to the indicator, 5 m long.
- Accuracy: +/- 0.05% of the capacity.
- Digital calibration and set-up through keyboard or PC with DINITOOLS.
- Fitted built-in rechargeable battery and internal 110-240 Vac power adapter.
- **The stainless steel model has structure and load surface in AISI304.**

## SELECTABLE FUNCTIONS

- **High Resolution Weighing x 10**
- **Net/Gross or lb/kg conversion**
- **Accumulation**
- **Formula weighing**
- **+/- Checkweighing**
- **Percentage weighing**
- **Counting** (Max. resolution of 1.500.000 divisions)
- **In/Out Truck weighing**
- **Hold and Peak**
- **Peer-to-peer** (up to 4 remote connectable indicators)
- **Set Point Control** (with optional interface)

## STANDARD I/O SECTION:

- RS232/C port configurable for connection with printer.
- RS232/C bi-directional port configurable for PC, PLC.




**KEYBOARD FUNCTIONS:**

- Zeroing, Automatic tare; Presetable tare; Print and/or data transmission commands; selectable function command; on/off

**OPTIONS ONLY AVAILABLE AT TIME OF ORDER**

- Attached stand or stainless steel bracket for fastening to wall.
- Thermal printer option box
- CE-M approved models for use with third parties: 3000e or dual range 2x3000e.

**Available versions**

<b>Code</b>	<b>l x w x h (mm)</b>	<b>Max (kg)</b>	<b>d (g)</b>	<b>CE-M* 3000e (g)</b>	<b>CE-M* 2x3000e (g)</b>	<b>d* HR (g)</b>
EPW6	1260x800x85	600	100	200	100-200	50
EPW15	1260x800x85	1500	200	500	200-500	100
EPW30	1260x800x85	3000	500	1000	500-1000	---
EPWI6 	1260x800x75	600	100	200	100-200	50
EPWI15 	1260x800x75	1500	200	500	200-500	100
EPWI30 	1260x800x75	3000	500	1000	500-1000	---

(\*) These divisions are obtainable only with the relative options

**Options only available at time of order**

<b>Code</b>	<b>Description</b>
<b>ECM1B</b>	CE-M 3000e approval for class III or IIII scales, with capacity from 31 to 1500 kg.
<b>ECM2B</b>	CE-M 2x3000e approval for class III or IIII scales, with capacity from 31 to 1500 kg.
<b>ECM1C</b>	CE-M 3000e approval for class III or IIII scales, with capacity from 1501 to 6000 kg.
<b>ECM2C</b>	CE-M 2x3000e approval for class III or IIII scales, with capacity from 1501 to 6000 kg.
<b>SWM</b>	WeiMonitor PC program for monitoring and recording in real time all the weighs executed on the connected scale.
<b>EHR</b>	High resolution model for internal factory use.
<b>OBTPRP</b>	Thermal printer for mounting attached to weight indicator, with ABS case, connection cable, power supply from weight indicator.
<b>OBMDP</b>	Thermal printer and memory data printer for mounting attached to weight indicator, with ABS case, connection cable, memory card, power supply from weight indicator.
<b>OBMMC</b>	Memory Data Printer for mounting attached to weight indicator, with ABS case, connection cable, memory card, power supply from weight indicator.
<b>OBCLTP</b>	Three way control light with acustical alarm, for mounting attached to weight indicator, with ABS case, connection cable, power supply from weight indicator.
<b>OBRF</b>	External 868 MHz radio frequency module, ABS IP65 protecting box, 3 m cable, power supply from weight indicator. Max. distance, in appropriate environmental and installation conditions: 70m indoors, 150m outdoors. 50 configurable channels.
<b>OBRFUSB</b>	868 MHz radio frequency module for PC, with PVC box and 1 m USB/mini USB connecting cable; power supply directly from the USB port. Max. functioning distance, in appropriate environmental and installation conditions: 70m indoors, 150m outdoors. 50 configurable channels. (OBRFUSB must be combined with another radio module).

<b>DFCLK</b>	Real time clock for printing/displaying of the date and time.
<b>DFIO</b>	Input/output interface with 2 optoisolated digital inputs and 2 Photomosfet outputs for management setpoints with programmable weight threshold (not combinable with ALMEM alibi memory option).
<b>ALMEM</b>	Alibi memory (fiscal memory, max 120.000 weighs) for approved transmission of the weight to PC/PLC. Real time clock integrated for print of the date/time.
<b>DFTL12</b>	Infrared remote control, with 19 keys, for use up to 8 m of distance.
<b>WIFIT</b>	Integrated WI-FI interface for wireless connection (through access point) to the company computer system.
<b>ETH</b>	Integrated Ethernet interface with speed from 10 to 100 Mbps, TCP, UDP, IP, ARP, ICMP, Ethernet Mac protocols.
<b>ETHCBRJ</b>	Ethernet cable 1,5 m long, for connection between indicator and PC network. Made up of fairlead.
<b>USBMB</b>	USB interface, as an alternative of the standard connector RJ, for quick connection of the indicator to PC.
<b>USBCABMB</b>	USB cable, 1m long, for connection between indicator and PC (for USBMB interface).
<b>DF485</b>	RS485 bidirectional port
<b>DAC160</b>	Analogue output with D/A 16 bit converter, configurable from 0 to 10Vdc or from 0 to 20mA; Maximum applicable resistance on the output in current is equal to 350 Ohm; minimum applicable resistance on the output in voltage equal to 10KOhm.
<b>RSCBRJ</b>	RS232/C serial cable l= 1,5 m, for connection of the indicator to PC, made up of DB9 connector (9-pole) on PC side and RJ connector on indicator side.

## Accessories

Code	Description
<b>LP542S</b>	Thermal labeller with peel-off system, with 1,5 m RS232 cable for connection to weight indicator, external 100/240 Vac power adapter.
<b>CSP38I</b>	Stainless steel support column for the indicators of the DINI ARGEO and SCALE HOUSE range. Dimensions 520 x 527 mm, 1026 mm high, tubular Ø = 38 mm.
<b>STFI</b>	Stainless steel fixing bracket for mounting the weight indicator on wall.
<b>UKPLUG</b>	Power adapter from Schuko to BS1363.
<b>TECMAN</b>	Printed technical manual (free, if downloaded from the web). NET PRICE.
<b>UMAN</b>	Printed user manual (free, if downloaded from the web and available in the CD, fitted with the product). NET PRICE.



**EPWI**- closed structure and pointed end for eased entry and hypersanitizable stainless steel foot